

Helium Conservation: Using Balloon Cups and Sticks for Latex Air Inflation

STEP 1:

You will need these items:

- Latex Balloon
- Air Inflator
- Balloon Cup
- Balloon Stick



STEP 3:

Insert the balloon tail into a slot on the balloon cup and pull tightly.



Wrap the tail around the stem of the balloon 1 and 1/2 times.



Pull the remaining part of the tail tightly through the slot on the opposite side of the balloon cup.



STEP 2:

First, insert the air nozzle into the inflation valve of the balloon. Be sure to pinch the neck tightly around the tip of the inflator.



STEP 4:

Place your finger firmly beneath the cup as shown.



Then, insert the stick into the cup and twist to tighten.



Air-Inflated latex balloons can be sold individually, or added to plush animals, potted plants, or floral bouquets for added value.

FINISH:

