


Loop Arch

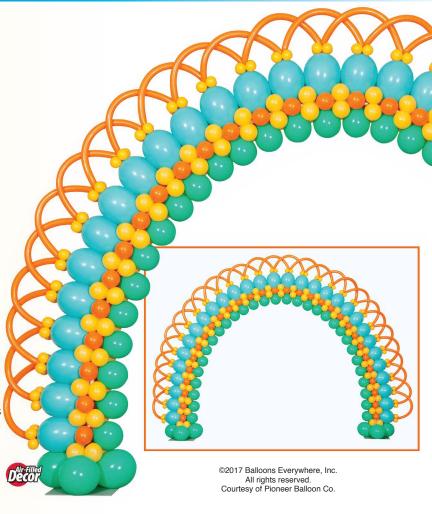

- 1. Assemble the AeroPole System according to the product instructions, using four of the included AeroPoles.
- 2. Air inflate two 11" wintergreen latex to 9" and tie into a duplet. Repeat to make three more duplets.
- 3. Starting at the bottom of one side of the arch, wrap one wintergreen duplet from Step 2 onto the frame so the two balloons are side-by-side. Wrap the other duplet onto the frame, adjacent to the first, so these two balloons are also side-by-side. Push down on the centers of each duplet to lock them together. (See Figure A.) Repeat for the other side of the arch.
- 4. Make 62 duplets of 5" yellow latex inflated to 4.5". Set aside.
- 5. Make 30 duplets using one 5" orange latex inflated to 4.5" and one 11" wintergreen latex inflated to 6.5". Set aside.
- Make 30 duplets using one 5" orange latex inflated to 4.5" and one caribbean blue Quick Link™ inflated to 9". Set aside.
- 7. Air inflate four 5" yellow latex to 3" and make a four-balloon cluster. Repeat to make 29 more clusters. Attach one of these clusters onto a caribbean blue Quick Link™ from Step 6 by tightly wrapping the tip around the center several times. Repeat to add a 3" yellow cluster to the remaining Quick Links™.
- 8. Starting on one side of the arch, wrap two 4.5" yellow duplets from Step 4 above the wintergreen cluster, rotating the balloons so they nest. (See Figure B.) There should be two yellow balloons in front and two in back.
- 9. Wrap a duplet of orange and wintergreen (from Step 5) and a duplet of orange and caribbean blue (from Step 6) above the yellow cluster. (See Figure C.) Position the balloons so the wintergreen is on the inside and the caribbean blue is on the outside of the arch. The orange balloons should be positioned in the front and the back.
- 10. Repeat Steps 8-9 until the arch is complete. Take care not to pack the clusters so tight that the balloons are "squished". The caribbean blue balloons should just be touching each other.
- 11. Inflate 28 orange 260s to 29" and tie each separately. Tie off the uninflated end, and trim the excess, leaving a 1" tail.
- 12. Starting at the bottom left side of the arch, wrap the knot end of a 260 into the 3" yellow cluster on the Quick Link™. Skip the next Quick Link™, and wrap the other end of the 260 into the cluster on the third Quick Link™.
- 13. Wrap the knot end of a 260 into the 3" cluster on the second Quick Link™. Skip the next Quick Link™, and wrap the other end of the 260 into the cluster on the fourth Quick Link™.
- 14. Repeat Steps 12-13 to continue adding the remaining 260 loops to the arch. Take care to maintain a consistent overlapping pattern when wrapping them in.



MATERIALS

Figure B

Figure C

Figure A

QTY	ITEM	SIZE	DESCRIPTION
1	12815	12"	Caribbean Blue Quick Link™ Balloons (30 needed)
1	11232	11"	Wintergreen Latex (38 needed)
3	5124	5"	Yellow Latex (244 needed)
1	5125	5"	Orange Latex (60 needed)
1	18305	260	Orange Twistee Latex (28 needed)
1	1635		AeroPole System™ Kit

